



Compaq iPAQ Pocket PC 3830 Battery Replacement

This guide will teach a user how to remove the back cover of the device and how to remove the old battery to replace with a new battery.

Written By: Sedina Cavcic




10.10.2014

Step 1 — Remove four screws from back cover




- Remove the four 0.8 mm Phillips #00 screws from the back cover.

Step 2

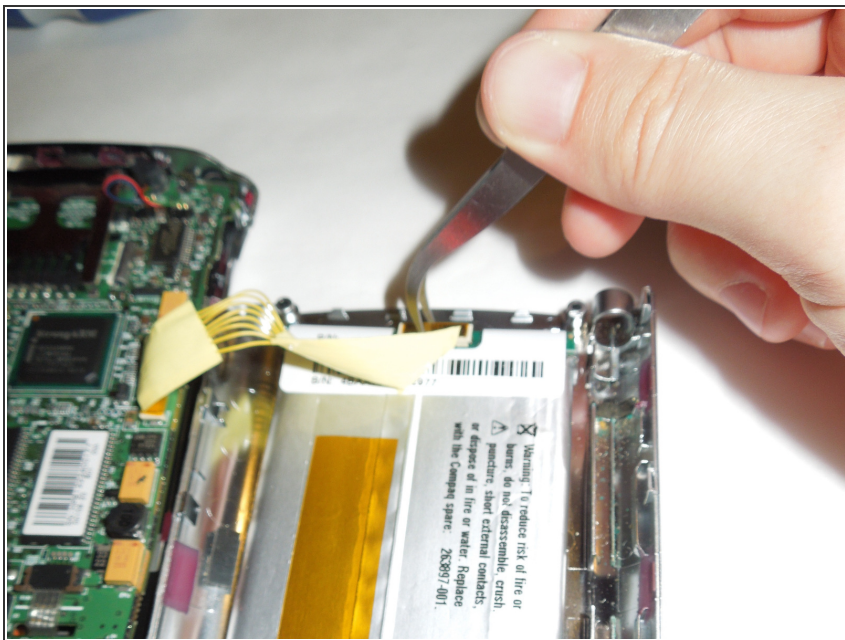

- Detach the yellow wire from comb that is attached to the battery.

Step 3

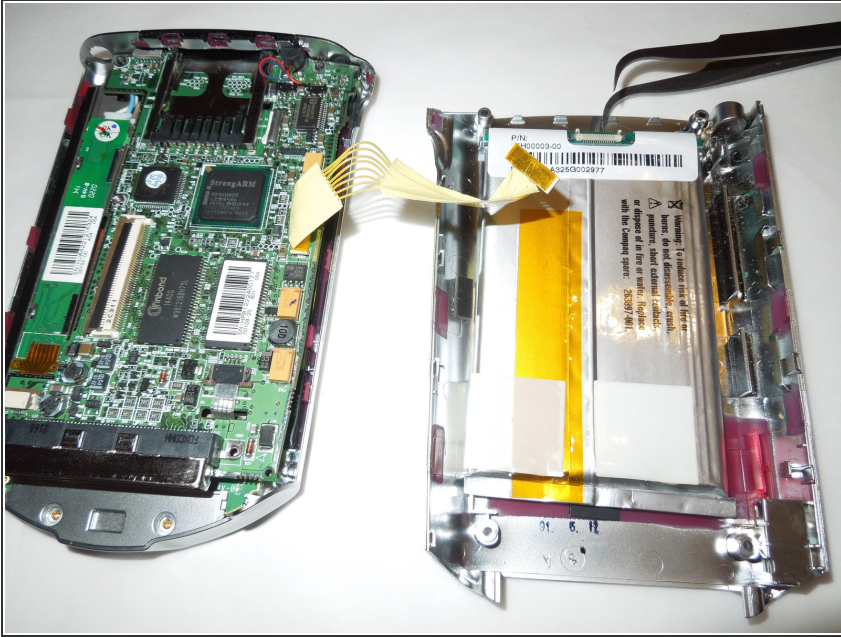


- The yellow wire is removed from the comb attached to the battery.

Step 4



- Remove the battery using tweezers from back cover.

Step 5

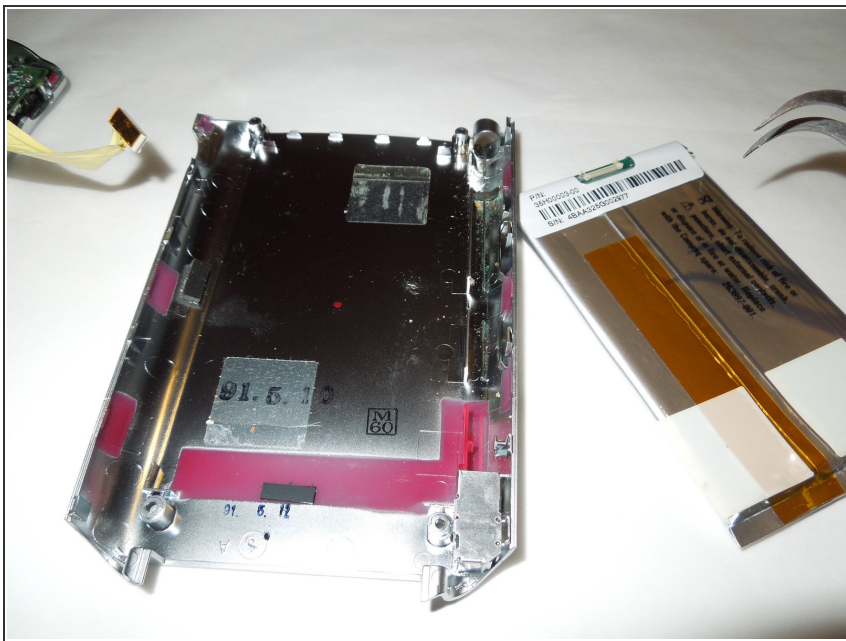

- Detach the battery from back cover.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 08:29:14 PM.